

自动卷发器 使用说明书



塑造完美造型

感谢您购买卷发器，使用前请仔细阅读此说明书的所有内容，然后把它放在一个安全的地方并把它传给任何一个随后的使用者!安全注意中

安全注意

本操作说明书包含了正确使用本产品的安全和说明。因此，使用前请认真阅读本说明书，并小心保存好，以避免使用不当而造成的损坏和危险。本产品为个人用品，不可供机构对多位人员使用。所有的安全说明都是为您的安全着想!

⚠ 注意!

- 器具首次使用时，可能会有轻微的烧糊味或者少许烟雾，这是器具金属件上残留的汗迹或油污遇高温所产生的，几秒钟后就会消失。属于正常现象，请放心使用。
- 如果选择的温度太高，会有烧头发的危险!
- 根据你的发型，错误的选择温度或不当的使用直发器，会使你的头发变干燥或严重的情况会烧伤。
- 在洗澡或淋浴时使用，不要在盛水的浴缸、淋浴、洗脸盆或其余器皿附近使用本器具;
- 当电线或插头损坏了，禁止使用本器具;
- 涉及环境保护说明、回收指示、适合的处理指示。

规格参数及包装

产品名称: 自动卷发器	产品型号: ZM-169
输入电压: 220V	额定频率: 50Hz
额定功率: 50W	发热方式: PTC发热
净重: 415克	发热温度: 约160°C 180°C 200°C (3档可调)
产品尺寸: 315*52mm	包装尺寸: 368*116*60mm

温度设定

开机后轻按开关1档，再按2档，再按3档，长按关机。

- 1档，约160°C，适合首次使用本卷发棒，或柔软薄的发质。
- 2档，约180°C，参考发质：金发，漂染或染色的头发。
- 3档，约200°C，参考发质：普通的和轻微卷曲的头发。

部件说明



卷发使用说明

外翘造型：取一缕头发放到卡槽里，按住右转键把头发都缠绕在发热管上，松开右转键等待10秒钟听到 beep 两声取出头发。

内卷造型：取一缕头发放到卡槽里，按住左转键把头发都缠绕在发热管上，松开左转键等待10秒钟听到 beep 两声取出头发。

关机：做完造型后，按“电源开关”关机。等做好造型的头发冷却后再用梳子整理好。

注：本器具智能高效节能。机器开机工作1小时后，会自动关机。如果要再次使用，可以按“电源”键重新开机。

直发使用说明

首先取下卷发筒，然后取一缕头发卡进发热管，从上到下拉下来。

关机：做完造型后，按“电源开关”关机。等做好造型的头发冷却后再用梳子整理好。

注：本器具智能高效节能。机器开机工作1小时后，会自动关机。如果要再次使用，可以按“电源”键重新开机。

清洁维护和保养

- 保护本器具远离潮湿，切勿将本器具放在洗碗机或微波炉中。
- 清洁前，切断电源。
- 切勿将本器具浸入水中。
- 不要使用尖锐的或有腐蚀性、挥发性稀释剂的清洁物。
- 可以使用柔软的湿布来清洁并用柔软干燥的布来擦拭干净。

售后维修

- 本器具只用于对人的头发进行卷发造型。不适合专业用途。
- 我们为产品提供为期1年的保修，保修期从购买日开始计算。
- 在保修期内对于产品因材料或生产过程的瑕疵。我们会视情况更换零件或整个产品。
- 申请保修必须将本产品能够证明购买日期的证明（购买发票）一起交由授权的维修站或工厂售后
- 以下情况公司不保修：
 - 1.由于使用不当造成的损坏，例如：使用错误的电源、将产品插入不知道的插座、人为损坏等。
 - 2.正常使用引起的产品老化、磨损，但对产品的使用功能影响不大。
 - 3.用于其它用途，或操作不当或非专业维修或者使用非本公司的配件，导致的产品问题。售后维修也不包括因上述原因造成的损坏。

Automatic hair straightener User Manual



Create a perfect look

Thank you for purchasing the curling iron. Please read all the contents of this manual carefully before use, then place it in a safe place and pass it on to any subsequent user! Attention to safety

Safety precautions

This operating manual contains safety and instructions for the proper use of this product. Therefore, please read this manual carefully before use and store it carefully to avoid damage and danger caused by improper use. This product is for personal use and cannot be used by institutions for multiple personnel. All safety instructions are for your safety!

⚠ Be careful!

- When the appliance is used for the first time, there may be a slight burning smell or a small amount of smoke, which is caused by sweat or oil residue on the metal parts of the appliance when exposed to high temperature, and it will disappear after a few seconds. This is a normal phenomenon, please feel free to use it.
- If the selected temperature is too high, there is a risk of hair burning!
- Choosing the wrong temperature or using a straightener improperly based on your hairstyle can cause your hair to dry out or, in severe cases, burn.
- Do not use this device near bathtubs, showers, washbasins, or other containers that hold water while taking a shower or shower;
- Do not use this device when the wires or plugs are damaged;
- It involves environmental protection instructions, recycling instructions, and appropriate disposal instructions.

Specification parameters and packaging


Product Name:	Product model: ZM-169
Automatic Curler	Rated frequency: 50Hz
Input voltage: 220V	Heating method: PTC heating
Rated power: 50W	Heating temperature: about 160°C, 180°C, 200°C (adjustable in 3 levels)
Net weight: 415 grams	Product size: 315 * 52mm
Product size: 315 * 52mm	Packaging size: 368 * 116 * 60mm

Temperature setting

After turning on, lightly press switch 1, then press switch 2, then press switch 3, and long press to turn off.

Grade 1, about 160°C, suitable for first-time use of this curling iron or soft and thin hair. 2nd grade, approximately 180°C, reference hair texture: blonde hair, bleached or dyed hair. 3 levels, approximately 200°C, reference hair quality: regular and slightly curly hair.

Component Description

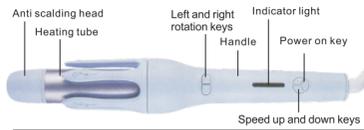

Instructions for using curly hair

Outward styling: Take a strand of hair and place it in the slot. Hold down the right turn button and wrap all the hair around the heating tube. Release the right turn button and wait for 10 seconds until you hear two beeps before removing the hair.

Inner Curling Style: Take a strand of hair and place it in the slot. Hold down the left turn button and wrap all the hair around the heating tube. Release the left turn button and wait for 10 seconds until you hear two beeps before removing the hair.

Shutdown: After completing the styling, press the "power button" to turn off the device. After the styled hair has cooled down, use a comb to tidy it up. Note: This device is intelligent, efficient, and energy-saving. After 1 hour of operation, the machine will automatically shut down. If you want to use it again, you can press the "power" button to restart.

Direct hair usage instructions

First, remove the hair roller, then take a strand of hair and clip it into the heating tube, pulling it down from top to bottom.

Shutdown: After completing the styling, press the "power button" to turn off the device. After the styled hair has cooled down, use a comb to tidy it up.

Note: This device is intelligent, efficient, and energy-saving. After 1 hour of operation, the machine will automatically shut down. If you want to use it again, you can press the "power" button to restart.

Cleaning, maintenance, and upkeep

- Protect this appliance from moisture and do not place it in a dish washer or microwave.
- Cut off the power before cleaning.
- Do not immerse this device in water. Do not use sharp or corrosive, volatile diluents for cleaning.
- You can use a soft damp cloth to clean and a soft dry cloth to wipe clean.

After sales maintenance

- This device is only used for curling human hair. Not suitable for professional use.
- We provide a one-year warranty for our products, which starts from the date of purchase.
- During the warranty period, any defects in the product due to materials or production processes. We will replace parts or the entire product depending on the situation.
- To apply for warranty, the product and proof of purchase date (purchase invoice) must be submitted to an authorized repair station or factory after-sales service. The company does not provide warranty in the following situations:
 1. Damage caused by improper use, such as using the wrong power source, inserting the product into an unsuitable socket, human damage, etc.
 2. Product aging and wear caused by normal use have little impact on the functionality of the product.
 3. Product problems caused by improper operation, non professional maintenance, or the use of non company accessories for other purposes.After sales service does not include damages caused by the aforementioned reasons.